


TOB1000

ASSEMBLY & INSTALLATION GUIDE

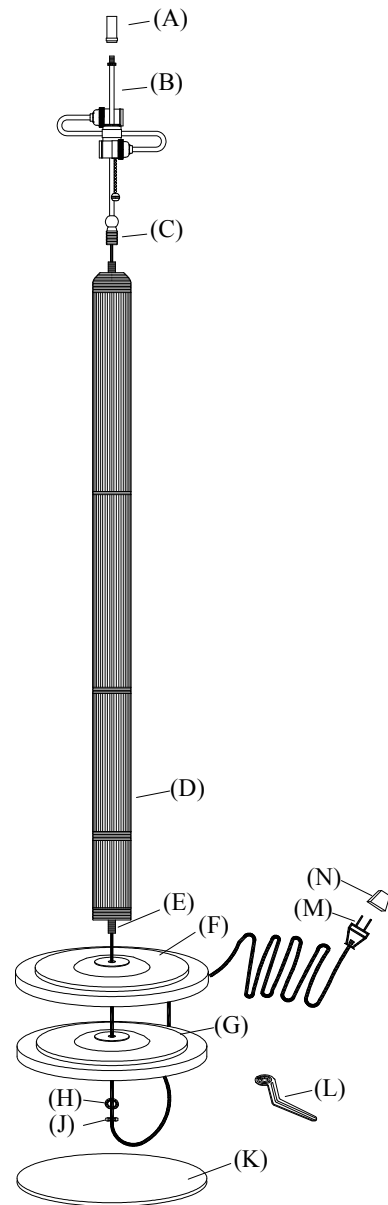

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. Thread part (C) onto top threaded rod of part (D).
2. Join parts (D) (F) & (G) together by tightening washer (H) & nut (J) to threaded pipe (E). Tighten with wrench (L)
3. Pull the wire until tight
4. Remove backing sheet from felt paper (K), and attach the felt paper underneath the lamp base.
5. Remove finial (A) from shade support tube (B), attach lamp shade over top thread of shade support tube (B), and secure with finial (A)
6. Insert light bulbs into sockets.
7. Remove red plastic (N) from electrical plug (M)
8. Plug lamp into wall outlet.